


# Spartan Doors : Door Frame

## How to calculate reveal sizes and overall sizes based on door size:

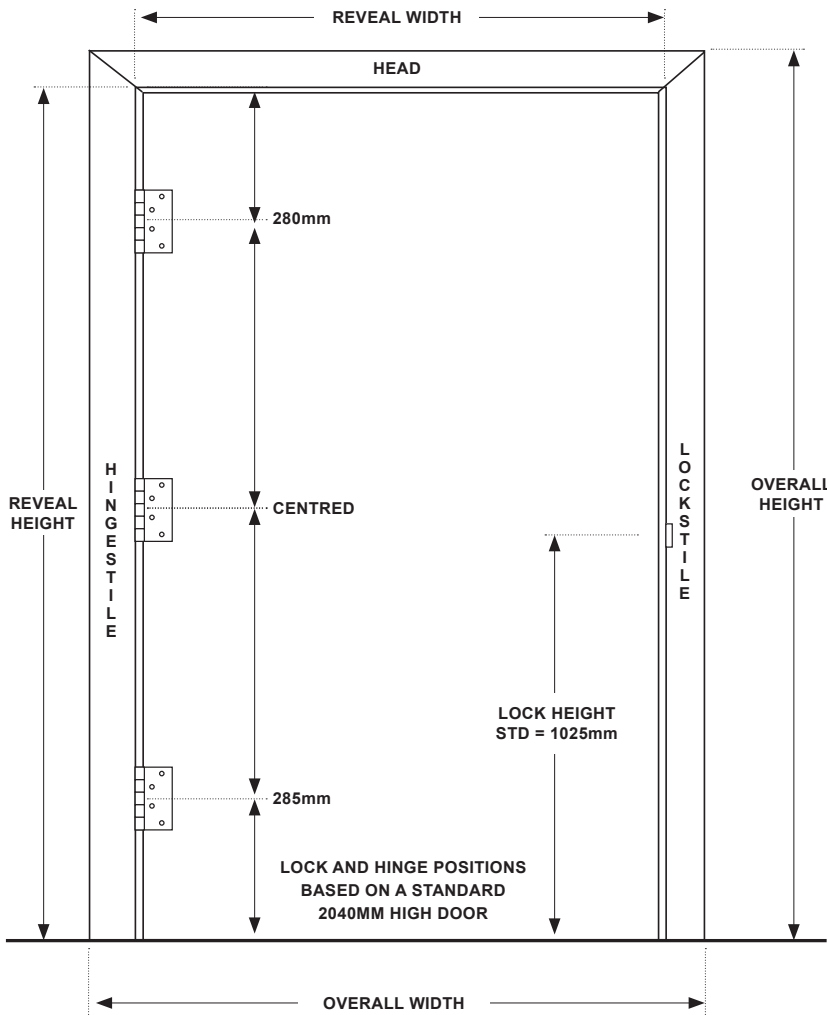


### For a fire rated door:

- Add 4mm to the door width to get the reveal width
- Add 80mm to the door width to get the overall width
- Add 8mm to the door height to get the reveal height
- Add 46mm to the door height to get the overall height
- Subtract 50mm from the reveal width to get the clear opening width
- Subtract 25mm from the reveal height to get the clear opening height

### For a non-fire rated door:

- Add 6mm to the door width to get the reveal width
- Add 82mm to the door width to get the overall width
- Add 10mm to the door height to get the reveal height
- Add 48mm to the door height to get the overall height
- Subtract 30mm from the reveal width to get the clear opening width
- Subtract 15mm from the reveal height to get the clear opening height

\* Height calculations do not include allowance for flooring

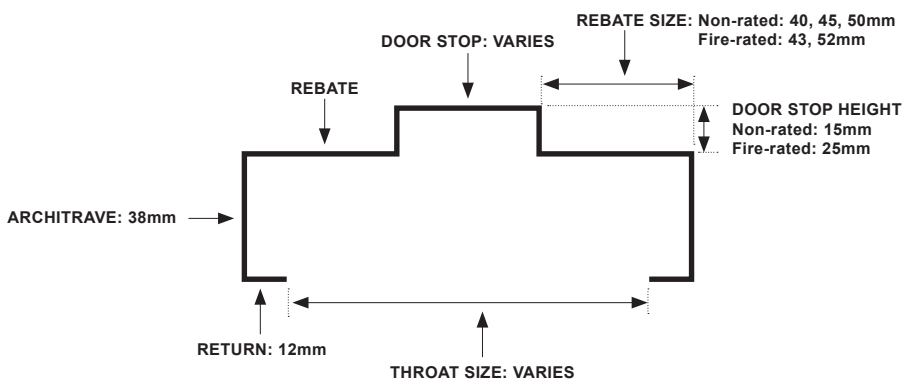

110 Mitchell Avenue, Kurri Kurri, NSW, 2327, Australia  
**PHONE:** 1300 784 852 | **FAX:** 1300 784 952 | **EMAIL:** info@spartandoors.com.au  
**WEB:** www.spartandoors.com.au.com.au

